

USER MANUAL

JZ¹¹⁵

Precision	Capacity
0.01g	115g
0.001oz	4.06oz
0.001ozt	3.7ozt
0.01dwt	73.9dwt

JZ²³⁰

Precision	Capacity
0.1g	230g
0.01oz	8.12oz
0.01ozt	7.4ozt
0.1dwt	147.9dwt

JZ⁵⁶⁰

Precision	Capacity
0.1g	560g
0.01oz	19.75oz
0.01ozt	18ozt
0.1dwt	360.1dwt

Thank you for purchasing the J-SCALE[®] JZ pocket scale. Please read all operating instructions carefully before use. This electronic scale is a precision instrument. With normal care and proper treatment, it will provide years of reliable service.

OPERATION

1. Place the scale on a horizontal flat surface, press [**ϕ/T**] key to turn on the scale. Hold [**ϕ/T**] for 3 seconds to turn off.
2. Wait until "0" is displayed.
3. Place the object(s) on the weighing platform.
4. Press [**M**] key to toggle the weighing units.

TARE

1. Turn on scale as described above.
2. Place the "tare item" on the platform.
3. Press [**ϕ/T**] and wait until "0" is displayed.
4. Add the "net-weight-item".
5. Press [**ϕ/T**] again to return the scale to zero.

CALIBRATION: *The JZ-115 requires a 100g weight to calibrate.*

1. Ensure the scale is off and place on a stable surface.
2. Press and hold **[M]** and **[ϕ/T]** button. Release when the display shows “CAL” and the AD value (a series of random numbers).
3. Press **[ϕ/T]** again, the LCD display will flash the required calibration weight.
4. Place the required calibration weigh on the tray and wait 3 seconds. The display will show “PASS”.
5. Calibration is complete. Remove the weight and continue.

The JZ-230 requires a 200g and JZ-560 requires a 500g weight to calibrate.

1. Ensure the scale is off and place on a stable surface.
2. Press and hold **[M]** and **[ϕ/T]** button . Release when the display shows the AD value (a series of random numbers).
3. Press **[ϕ/T]** again, the LCD display will show “CAL” then the required calibration weight.
4. Place the required calibration weight on the tray and press **[ϕ/T]**. The display will show “PASS”.
5. Calibration is complete. Remove the weight and continue.

SPECIFICATIONS

Tare Range	Full Capacity
Op. Temp	10 to 30 °C
Power	2 x AAA
Scale Dim.	88mm x 60mm x 20mm
Tray	50mm x 55mm
Modes	g, oz, ozt, dwt

DISPLAY ERROR MESSAGES

[88888]	Overload
[OUT2]	Recalibrate

